



ELECTRIC CONNECTIONS

1

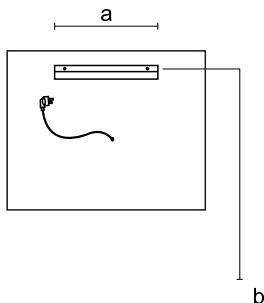


This part of PF frame can be use as hanger.

2

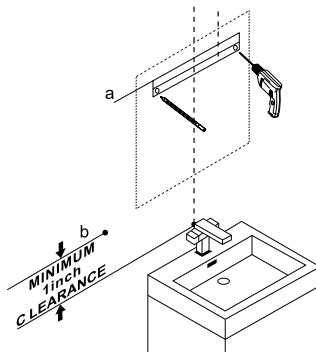


a. Mark pre installation hole position on wall for mounting bracket.
b. Use drill to make hole in wall.

3

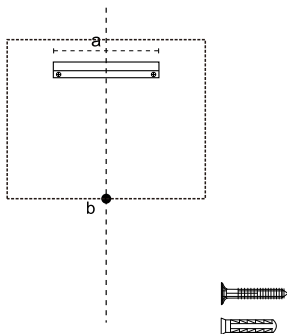

Screw mounting bracket to the wall.

4

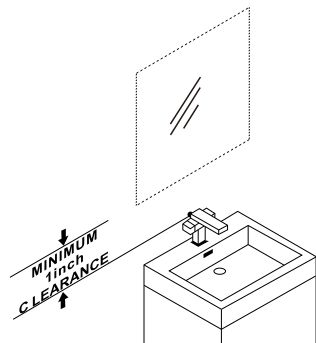

a. Mark pre installation hole position on wall for mounting bracket.
b. Use drill to make hole in wall.

TOOLS REQUIRED

	 15/64"		
DRILL	DRILL BITS	MEASURE TAPE	PENCIL